



P- 配件

螺钉

Series





PLB/PL 安装配件规格

规格型号	适用吸盘							
柔软型	P4L	P6L	P8L	P10L	P15L	P20L	P30L	P40L
柔软波纹风箱型	—	P6LB	P8LB	P10LB	P15B	P20LB	—	—
螺钉	FVPL15-M4	●	●	●	●	—	—	—
	FVPL40-M6	—	—	—	—	●	●	●

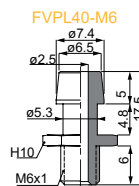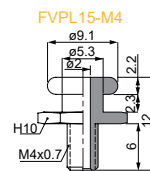



PE 安装配件规格

规格型号	适用吸盘					
椭圆型	P2X4E	P4X10E	P4X20E	P4X30E	P8X20E	
	P3.5X7E	P5X10E	P5X20E	P5X30E	P8X30E	
	—	P6X10E	P6X20E	P6X30E	—	
螺钉	FSPH10-M6	●	●	—	—	—
	FSPH20-M6	—	—	●	●	●
	FSPH10-B5	●	●	—	—	—
	FSPH20-B5	—	—	●	●	●

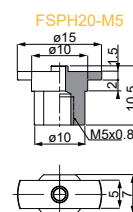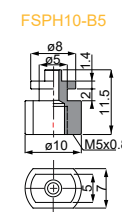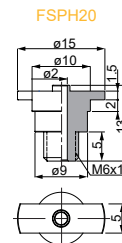

PF 安装配件规格

规格型号	适用吸盘				
薄板用型	P10F	P15F	P20F	P25F	P30F
螺钉	PVLF15-M4	●	●	—	—
	PVLF30-M6	—	—	●	●

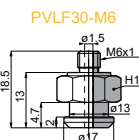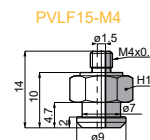

PR/PA/PB/PK/PW 安装配件规格

规格型号	适用吸盘												
吸盘	标准型	P10R	P15R	P20R	P25R	P30R	P40R	P50R	P60R	P80R	P100R	P150R	P200R
	深凹型	—	P15A	P20A	P25A	P30A	P40A	P50A	—	—	—	—	—
	波纹风箱型	P10B	P15B	P20B	P25B	P30B	P40B	P50B	—	P80B	—	—	—
	防滑型	P10K	—	P20K	—	P30K	P40K	P50K	—	—	—	—	—
	多层型	P10W	—	P20W	—	P30W	P40W	P50W	—	—	—	—	—
螺钉	PM46-6	●	●	—	—	—	—	—	—	—	—	—	—
	PM610-8	—	—	●	●	—	—	—	—	—	—	—	—
	PM612-10	—	—	—	—	●	●	—	—	—	—	—	—
	PM610-15	—	—	—	—	—	●	●	—	—	—	—	—
	PM1018	—	—	—	—	—	—	—	●	●	●	—	—
	PM2028	—	—	—	—	—	—	—	—	—	—	●	●
压板	PW40	—	—	—	—	—	●	—	—	—	—	—	—
	PW50	—	—	—	—	—	—	●	—	—	—	—	—
	PW60	—	—	—	—	—	—	—	●	—	—	—	—
	PW80	—	—	—	—	—	—	—	—	●	—	—	—
	PW100	—	—	—	—	—	—	—	—	—	●	—	—
盖板	PH80	—	—	—	—	—	—	—	—	●	—	—	—
	PH100	—	—	—	—	—	—	—	—	—	●	—	—
	PH150	—	—	—	—	—	—	—	—	—	—	●	●

